




Step 1- Install Drywall

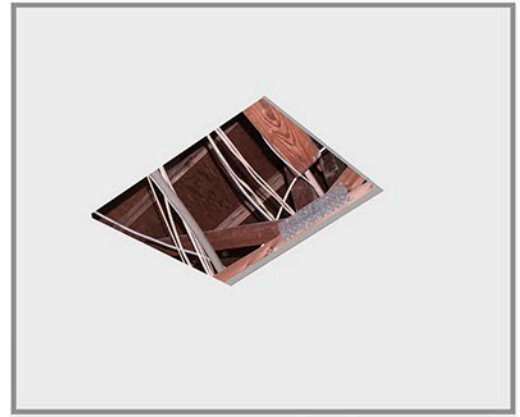


Step 2- Cut out opening in Drywall.
**Review Project submittal for exact cutout dimension requirements.*



Step 3- After cutout, install blocking and prepare housing for install




Step 4- Connect all wiring for housing before anchoring housing to supports.

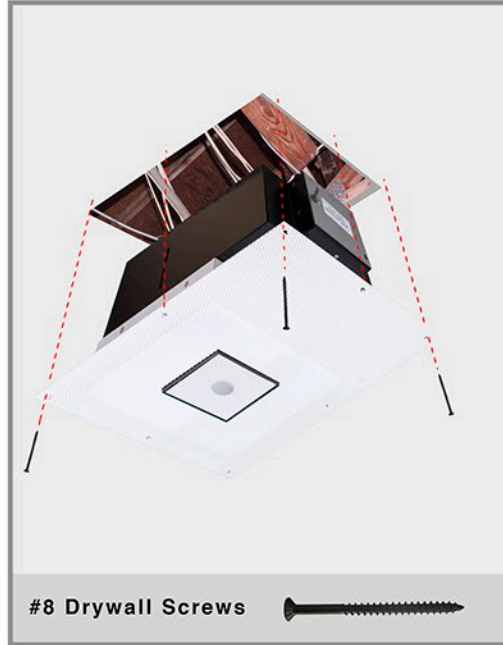

#8 Drywall Screws 

Step 5- Drill holes in Drywall. Anchor housing with #8 Drywall screws to structural supports.

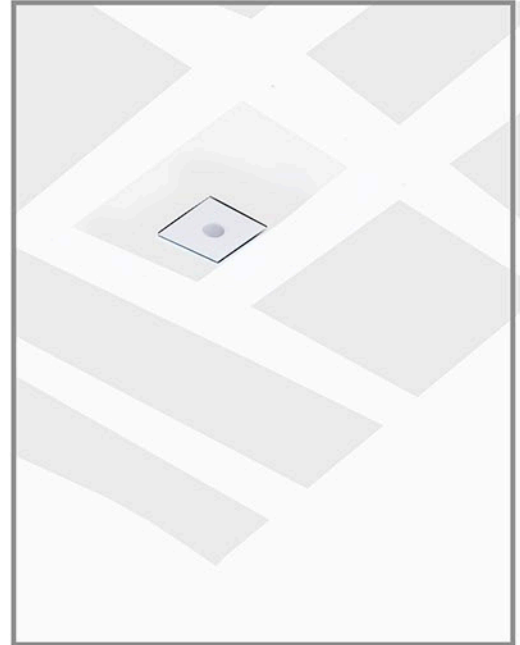


Step 6- Apply tape & joint compound over plaster flange and sand / finish




***Trim in view is 1240**

Step 7- Remove plaster plug. Install trim into housing... Finished.

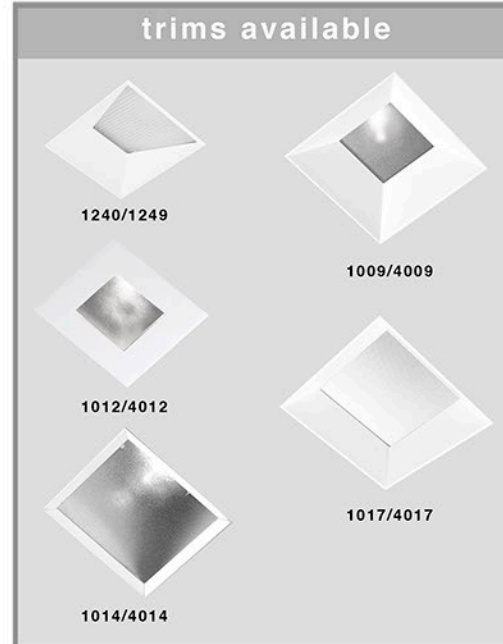

trims available

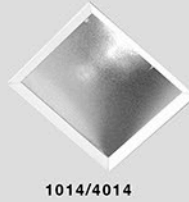

**Plaster Flangeless
 Square Trim
 Instruction Sheet for
 1009/4009
 1012/4012
 1014/4014
 1017/4017
 1240/1249
 Ceiling Installation**

