


## #811 MILLWORK INSTALLATION

1. Remove the baffle assembly from the fixture housing; screwdriver required.
2. Prepare blocking to support weight of fixture.
3. Connect power supply to fixture housing.
4. Using #8 flathead wood screws or standard sheet rock screws, mount the fixture housing through blocking to the wall and also to blocking on the other side.
5. Install lamps.
6. Install baffle assembly; screwdriver required.

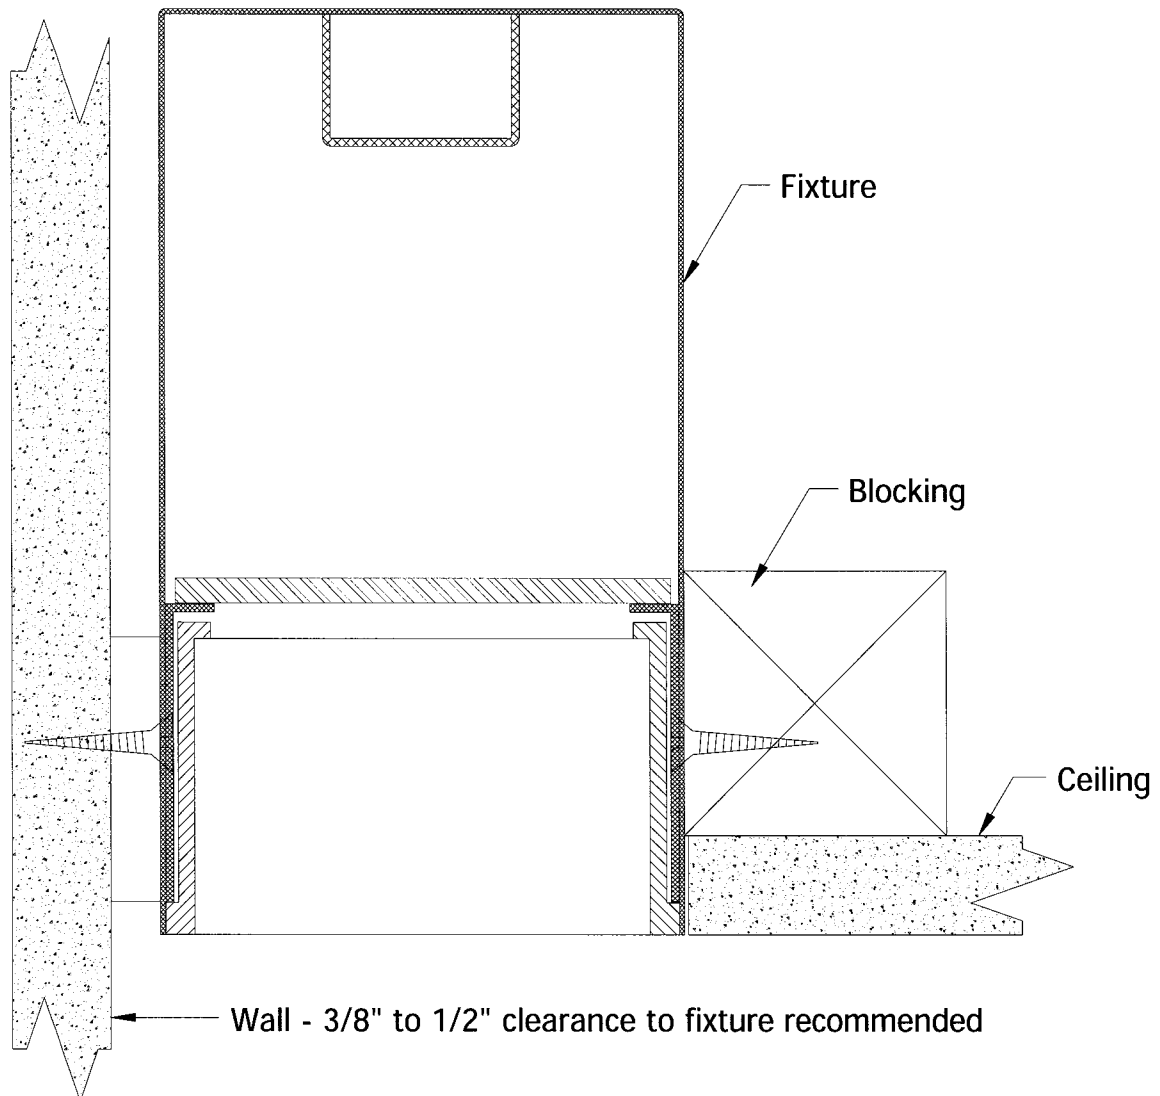

**SPECIALTY LIGHTING  
INDUSTRIES, INC.** ©2004

1306 DORIS AVENUE OCEAN, NJ 07712 800.462.7812 732.517.0800 FAX 732.517.0971 [www.specialtylightingindustries.com](http://www.specialtylightingindustries.com)

These specifications subject to change without notice.