


# 811 RELAMPING INSTRUCTIONS

1. Lift lens and slide it on top of adjacent lens.
2. Remove and replace lamp.
3. Slide lens back into it's original position.
4. To remove lens first remove a lamp to provide additional clearance. Lenses may then be slid into unlamped cell for removal or replacement.

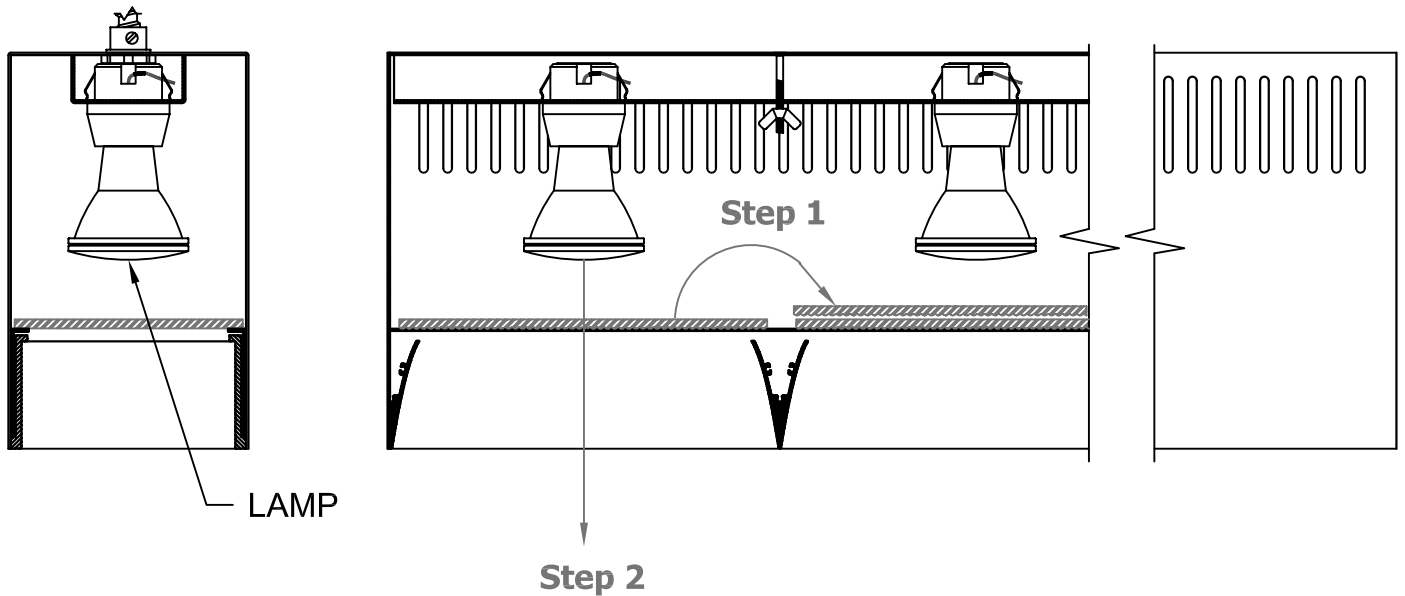

SPECIALTY LIGHTING  
INDUSTRIES, INC.

1306 DORIS AVENUE, OCEAN, NJ 07712 USA

800.462.7812

[www.specialtylightingindustries.com](http://www.specialtylightingindustries.com)

732.517.0800 FAX 732.517.0971